

# NEUSPEED®


## TORQUE ARM INSERT

2009-UP AUDI A3, 2008.5-UP AUDI TT, 2009-UP VW EOS  
2009-UP VW GTI MKV, 2009-UP VW JETTA V 2.0T FSI,  
2009-UP VW CC, PASSAT & TIGUAN

PART #22.10.68


### INSTALLATION INSTRUCTIONS

<b>PARTS LIST:</b>	1 - URETHANE INSERT	1 - 14MM WASHER
	1 - 3" SS FLAT WASHER	
<b>TOOLS LIST:</b>	1 - 21MM SOCKET	1 - JACK
	1 - SILICONE SPRAY	2 - JACK STANDS
	1 - TORQUE WRENCH	

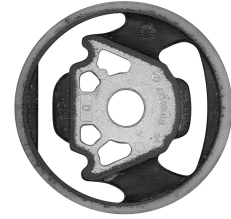

**NOTE:** Before proceeding with installation, please check to make sure your OEM mount looks like the one pictured above.

1. Raise front of vehicle and support with jack stands under lifting points. **NEVER WORK UNDER A VEHICLE SUPPORTED ONLY WITH A JACK!**

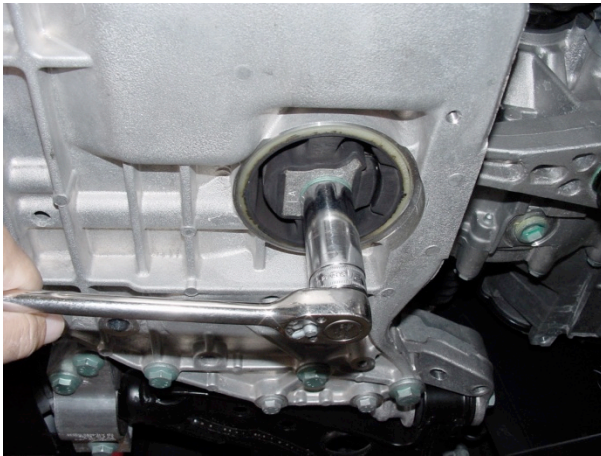


2. Unbolt the 21mm hex bolt from torque mount in aluminum sub-frame.



4. Install 14mm washer.



3. Use Silicone spray on urethane insert to ease installation, match up to rubber mount and push up until it bottoms out.

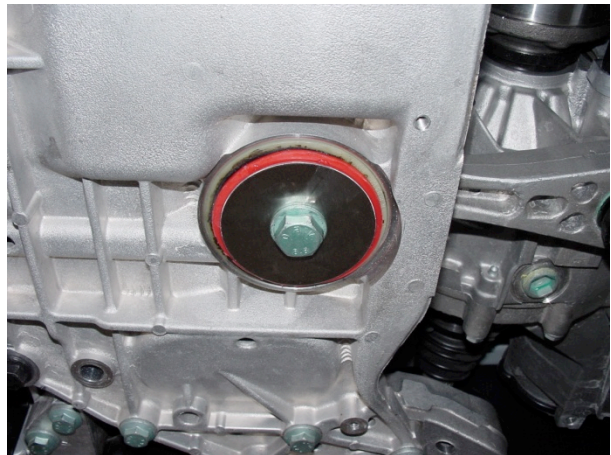

5. Install 3" stainless steel washer on to factory bolt and tighten into mount. Torque bolt to 74 ft. lbs.

©2009, Automotive Performance Systems, Inc. All rights reserved. Reproduction in whole or in part prohibited.  
DOC.22.10.68 Rev. 02.05.09

**Automotive Performance Systems, Inc.** • 3300 Corte Malpaso • Camarillo, CA 93012  
805.388.7171 • 805.388.0030 FAX • [information@neuspeed.com](mailto:information@neuspeed.com)  
Visit us on the web...<http://www.neuspeed.com>