



Installation Procedures

E46 Carbon Fiber Strut Bar Installation Instructions

This tutorial is provided as a courtesy by ECS Tuning.

Proper service and repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures and precautions (including use of safety goggles and proper tools and equipment) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety.

Although this material has been prepared with the intent to provide reliable information, no warranty (express or implied) is made as to its accuracy or completeness. Neither is any liability assumed for loss or damage resulting from reliance on this material. SPECIFICALLY, NO WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR ANY OTHER WARRANTY IS MADE OR TO BE IMPLIED WITH RESPECT TO THIS MATERIAL. In no event will ECS Tuning, Incorporated or its affiliates be liable for any damages, direct or indirect, consequential or compensatory, arising out of the use of this material.



E46 Carbon Fiber Strut Bar Installation Instructions

Safety first!

Before you undertake this installation, it is important that you read the following instructions! Listed below are the necessary tools to complete the job. If the installation of this product seems overwhelming, please contact a qualified installer in your area.


Tools Needed

13mm Socket
8mm Allen
6mm Allen



ECS Tuning
1000 Seville Road, Wadsworth, OH 44281
Phone: 1.800.924.5172 www.ecstuning.com

E46 Carbon Fiber Strut Bar Installation Instructions

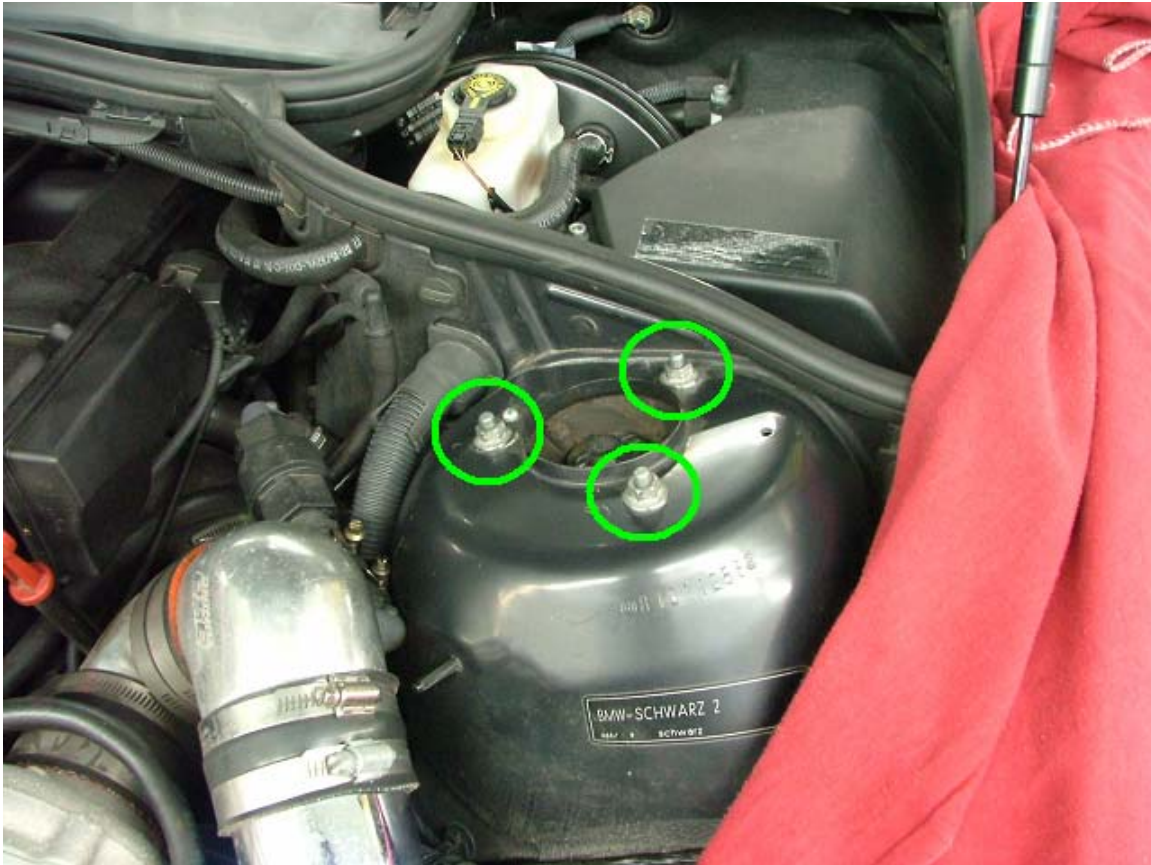

Start by removing the (6) Nuts on top of the strut towers. (left and right sides)

**E46 Carbon Fiber Strut Bar
Installation Instructions**



Install the right hand plate using the supplied stainless steel hardware.

**E46 Carbon Fiber Strut Bar
Installation Instructions**



Install the driver side plate the same way.

E46 Carbon Fiber Strut Bar Installation Instructions



Position the strut bar on the plates to your liking, being sure to carefully center the bar (left to right) and install the 8mm stainless steel Allen bolts.

Carefully check over entire installation ensuring all fasteners are tight, and all tools are accounted for.

Test drive vehicle in a safe, responsible manner.

You have successfully completed the installation of your ECS Carbon Fiber Strut Bar.