




Teile und Zubehör - Einbauanleitung

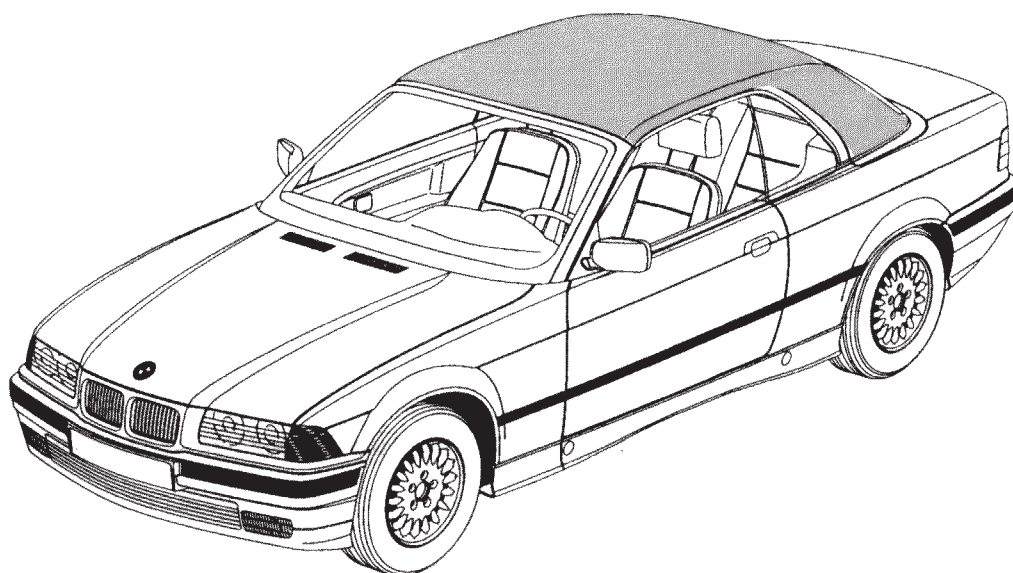

F 36 72 103

Installation Instructions

Preparations for the Hardtop

Preparations for the Hardtop

The hardtop retaining brackets must be fitted and the hardtop itself must be fitted for the first time in an authorized BMW workshop in order to prevent any damage to the hardtop or the car. Installation time: approx. 1 hour.

Tools and other equipment required

Ring spanner, A/F 10 mm
Side nippers

Table of Contents

Section

1. Necessary Preparations
2. Installing the Hardtop Retaining Brackets
3. Fitting the Contact Caps
4. Affixing the Adhesive Clips
5. Running the Cable to the Contact cap

1. Necessary Preparations

- Remove rear seat bench
- Remove rear seat backrest
- Remove side trim panels

Note

The fitting procedures are illustrated only for the left-hand side. The working steps for the right-hand side of the car must be carried out in the same way and in the same order.

2. Installing the Hardtop Retaining Brackets

F 36 72 104

Stow softtop in softtop compartment.
Push hardtop retaining bracket (1) under pillow block (2) and secure with screws (3).

Note about installation

The hardtop retaining brackets are marked L (left) or R (right) and with an arrow pointing in the direction of travel.

3. Fitting the Contact Caps

F 36 72 105

Fit contact cap (2) onto hardtop retaining bracket (1).

Note about installation

The contact caps are marked L (left) or R (right).
Connector 1 faces forwards in the direction of travel.

4. Affixing the Adhesive Clips

F 36 72 106

Close softtop, fold up softtop bars and hold in this position. Affix adhesive clips (1) and (2) in softtop compartment in positions shown in drawing.

Note about installation

Beforehand, clean the areas in the softtop compartment where the clips are to be affixed.

5. Running the Cable to the Contact cap

F 36 72 109

Pull connector of cable (1) through sealing sleeve (5) into passenger compartment.

Run cable (1) through adhesive clips (2) and close clips. If not fitted (depends on equipment level of car), push retaining clip (4) into hole provided. Lay cable in softtop compartment as shown in drawing and secure with cable clips (3).

Note about installation

When laying the cable in the softtop compartment, make sure that it does not form loops. Make sure that the softtop mechanism can move freely.

F 36 72 110

Fold soundproofing mat (5) in passenger compartment towards centre of car. Connect connector (6) of cable (1) to existing connector (7). Run cable (1) through passenger compartment as shown in drawing and prevent it from slipping through into softtop compartment by fitting cable clip (2). If not fitted (depends on equipment level of car), push retaining clip (4) into hole provided. Secure cable with cable clip (3).

