


Screw-in Folding Tow Hook REV2

C2/C4/993/996/997/Boxster/Cayman/944T/968

Check to make sure that you have all parts listed prior to installation. If anything is missing contact us immediately .

Parts List :

- (1) 3/8-16 2 1/4 S/S button head bolt - MC92949A633
- (5) Nylon Washer - MC90295A200
- (2) Nylon Washer - MC95606A150
- (1) Buna - n Rubber O'ring - MC9452K387
- (1) Tow Hook
- (1) Threaded Bumper Insert
- (1) Tow Sticker
- (1) Rubber Bumper - MC95495K121

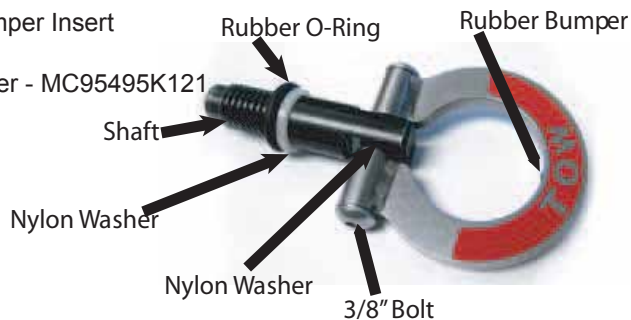

Step 1.

Assemble the tow hook assembly as shown in Photo 1. Note: For high vibration environments, we recommend dressing the 3/8" bolt with red loctite.

Step 2.

Screw the assembly into bumper as far as you can, leaving clearance between the tow hook ring/plate and bumper cover. Note: Due to the varying distance between bumper covers and bumper supports it may be necessary to add or remove nylon washers.

