

ECS **TUNING™**

Installation Procedures



Ziza Interior Lighting Package Installation ES2215317

for BMW E92

This tutorial is provided as a courtesy by ECS Tuning.

Proper service and repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures and precautions (including use of safety goggles and proper tools and equipment) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety.

Although this material has been prepared with the intent to provide reliable information, no warranty (express or implied) is made as to its accuracy or completeness. Neither is any liability assumed for loss or damage resulting from reliance on this material. SPECIFICALLY, NO WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR ANY OTHER WARRANTY IS MADE OR TO BE IMPLIED WITH RESPECT TO THIS MATERIAL. In no event will ECS Tuning, Incorporated or its affiliates be liable for any damages, direct or indirect, consequential or compensatory, arising out of the use of this material.

Fits BMW E92

LED Installation Instructions

Interior Lighting Kit for BMW E92
ES2215317



Tools

Trim removal tool – ES517779 (Kit)
T20 Torx Driver

Kit Contents

micro wedge base white LED (qty 4)
5-chip wedge base white LED (qty 10)
36mm white LED festoon (qty 1)
42mm white LED festoon (qty 3)

The Ziza Premium Interior Lighting package for BMW E92 adds crisp, white interior illumination at all interior lighting locations.

The LEDs in the kit are direct fit replacements for the stock incandescent bulbs.

This tutorial explains how to access and replace bulbs all interior light locations.

Fits BMW E92

What are LEDs?

LEDs are Light Emitting Diodes, solid state devices that emit light when connected to electrical current. They have no moving parts or wire filaments to burn out. They emit a whiter light, run cooler, and last longer than the incandescent (filament style bulbs) we are replacing in this tutorial.

Unlike filament bulbs, LEDs are polarity sensitive. They have plus and minus (positive and negative) electrical terminals that must match the polarity of the applied voltage. Installing the bulbs “backwards” in the light bulb sockets (with reversed polarity) will not harm them, but they will not light. Flipping the bulb 180 degrees in the electrical connector cures this problem.

Bulb Types


This kit includes two bulb types, classified by their general shape.

FESTOON - Conventional incandescent **festoon** bulbs have a shape and general appearance that is similar to a glass fuse.

Metal caps attached to both ends of a glass tube are sealed to the tube and attached to the bulb filament. End caps mount the bulb in its holder and also conduct electrical current.

LED festoon lights have the same pointed end caps, but are attached to a bank of LEDs instead of a filament tube.


festoon

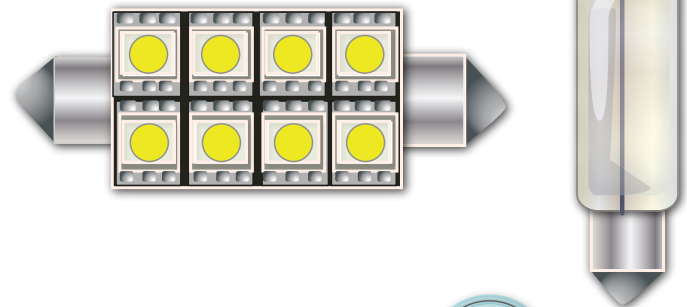

WEDGE - Wedge style bulbs get their name from the shape of the bulb base. The tapered end of the bulb “wedges” into the bulb socket.

LED wedge lights fit the bulb socket like a filament bulb, but are commonly polarity sensitive.

wedge

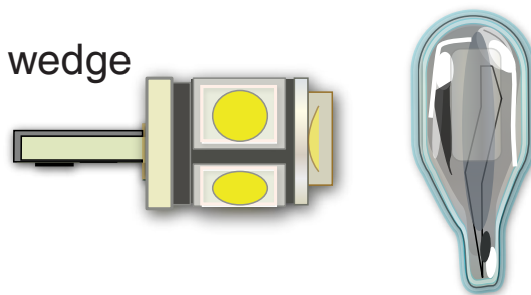

Ziza Interior Lighting Package Installation


ES2215317



Fits BMW E92

Ziza Interior Lighting Kit Locations




Make BMW
Model E92 335i
Kit Part Number ES2215317

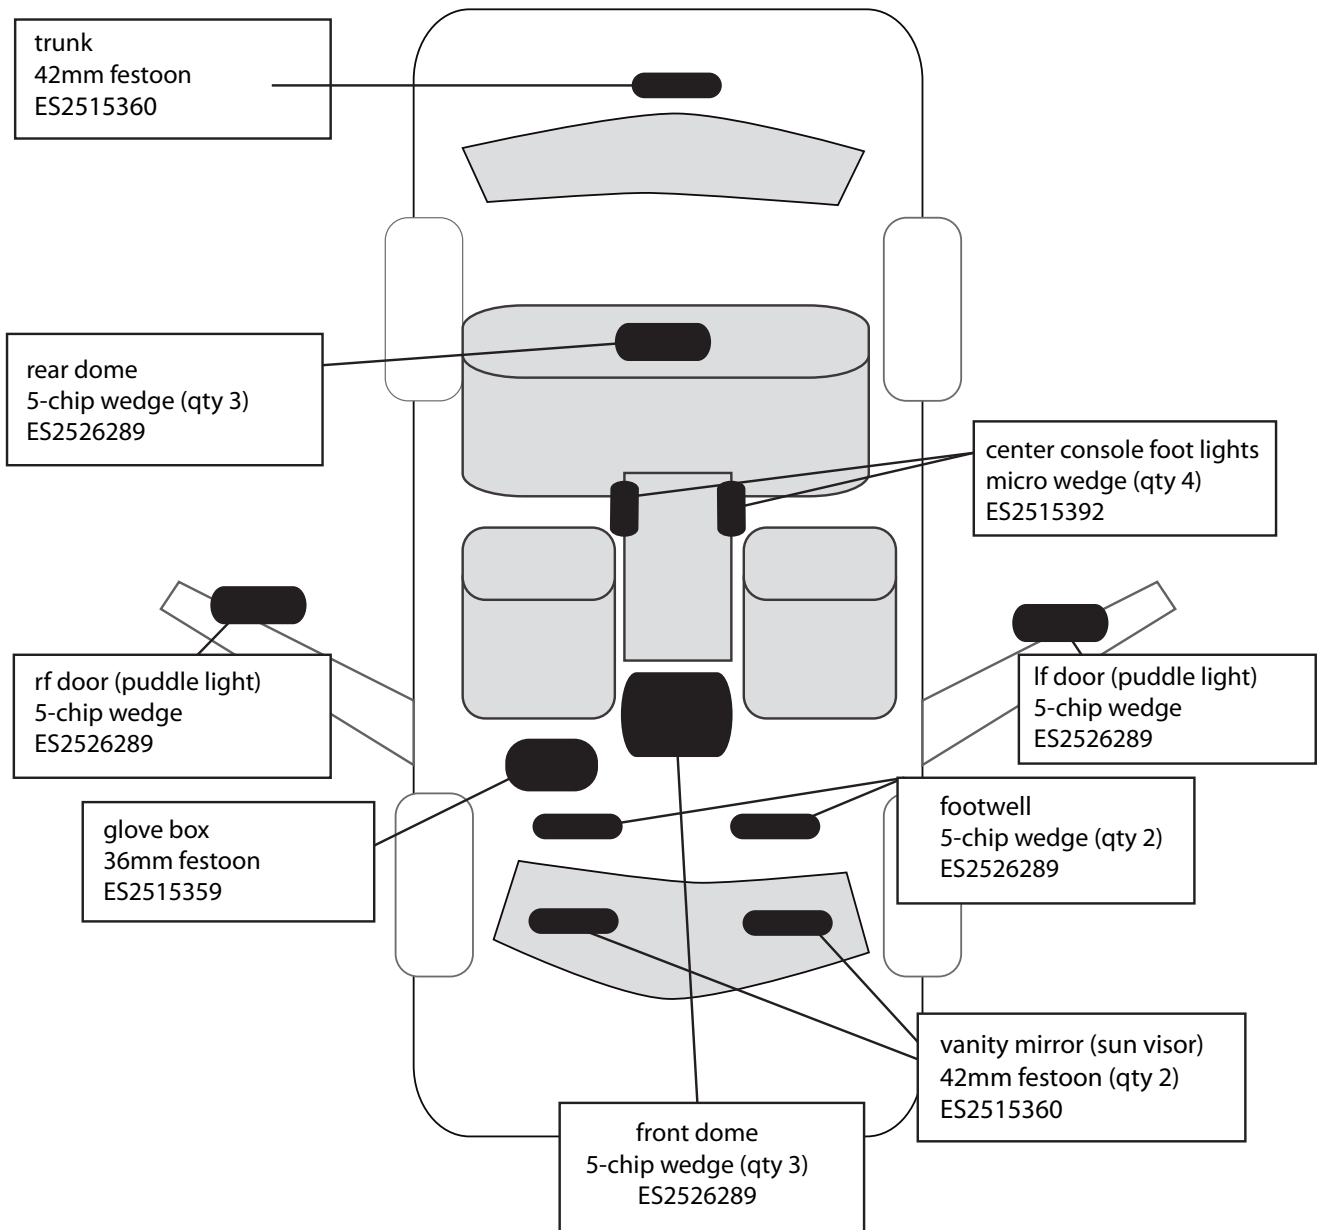

Fits BMW E92

General Tips

- When prying down on the assemblies to remove them, pry on the notched end of the lens. Insert the narrow tool tip **between** the lens plastic and any metal collar used to reinforce the lens mounting hole. Push in on the retaining clip first to compress and release it. Then pry down.
- The spring bulb retainer is also the circuit conductor. If necessary, gently bend the metal retainer so it holds the bulb tight. This will help prevent intermittent or flickering LED operation caused by a loose connection.
- Install the bulbs with the LEDs facing toward the lens.

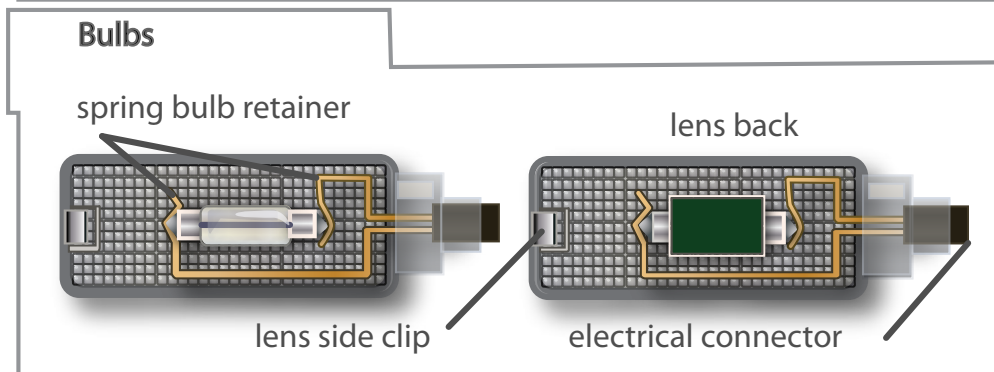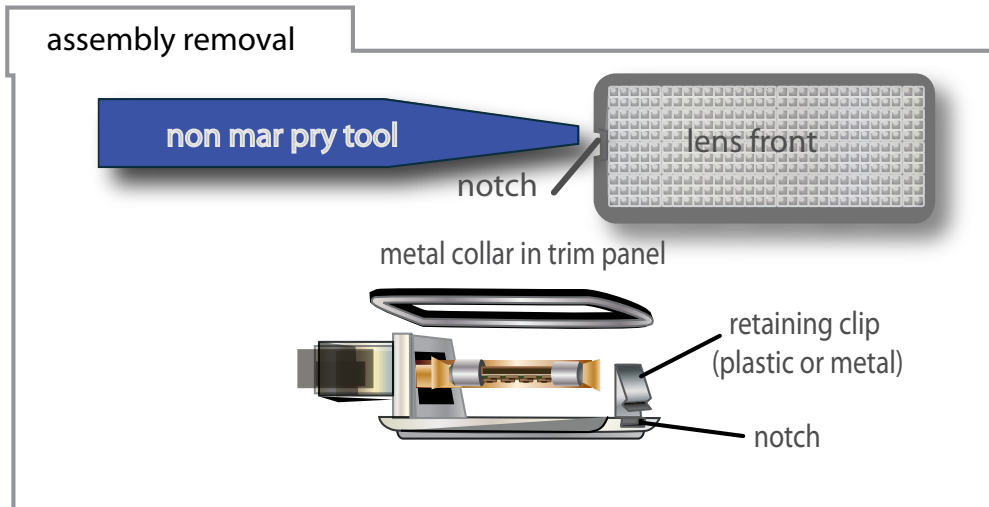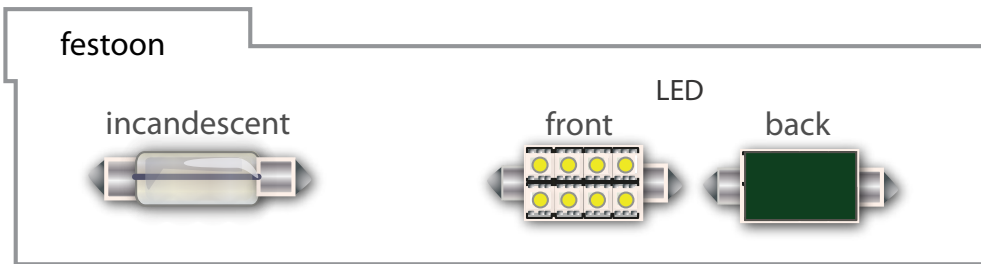

Fits BMW E92

Front Dome and Vanity LED Installation



Front Dome - Step 1

The front dome light console is secured in the headliner by plastic tabs at the rear and by a pair of metal spring clips at the front. The metal clips snap against the edge of the headliner to hold the console in place.




Front Dome - Step 2

To give you a better idea what the metal spring clips look like, and where they are located, here is a shot of the console after it has been removed.

The spring clips (arrows) must be compressed to release the console.

To access the clips, we will drop the headliner down.

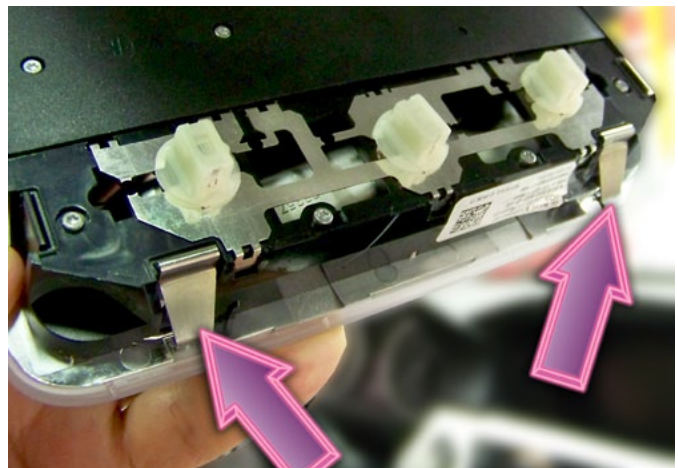

Ziza Interior Lighting Package Installation

ES2215317



Fits BMW E92

Front Dome - Step 3

Lower both sun visors, and pull them off to the side, out of your way.

Using a T20 Torx® driver, unscrew and remove the sun visor attachment clips.



Front Dome - Step 4

Gently lower the front edge of the headliner, and reach up between the headliner and the roof of the car; push against the metal console clips to release them, and drop the console down.




Front Dome - Step 5

Twist and pull the three bulb holders to remove them from their sockets in the rear of the console panel.

Remove the original bulbs and insert a new 5-chip LED in each holder.

These are polarity sensitive. If they do not work when tested, remove and rotate the bulb holders 180 degrees.

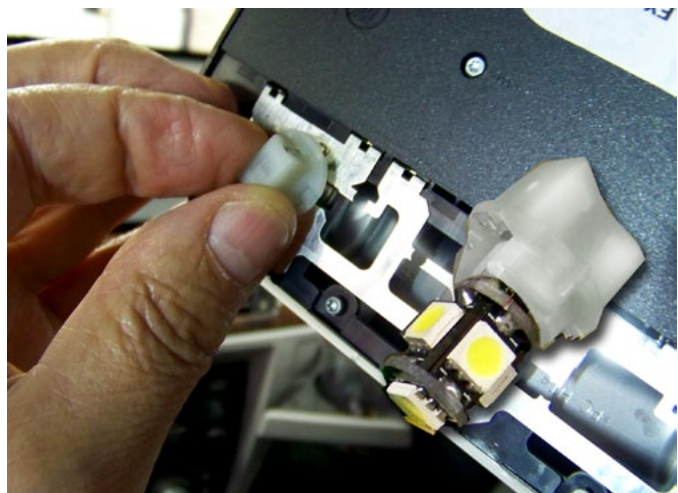

Ziza Interior Lighting Package Installation

ES2215317



Fits BMW E92

Front Dome - Step 6

Insert the rear of the console into the headliner as shown and tip the front upward until the clips snap in place.

Replace the sun visor clips.



Vanity Mirror Lights - Step 1

Using a non-marring trim removal tool, pry down on the light assembly as shown to release it from the headliner.



Vanity Mirror Lights - Step 2

Remove the original filament festoon bulb and insert a new 42mm festoon LED array in its place.

Install it with the LED chips facing the lens.

The LEDs are polarity sensitive. If it does not light when first installed, flip the array end-for-end, and retest.

Snap the assembly back into the headliner and repeat the process at the other vanity light.



Fits BMW E92

Rear Dome LED Installation



Rear Dome - Step 1

Place your thumbs against the front edge of the rear dome light console and push toward the rear of the car. This compresses the spring clips.

Drop the front of the console down.



Rear Dome - Step 2

Use the same procedures used on the front dome light to replace the three original bulbs with 5-chip LEDs.

As always, test the LEDs. If one or more do not work initially, remove and rotate them 180 degrees to reverse their polarity.

Snap the console back into the headliner when all LEDs are working.



Fits BMW E92

**Glove Box
Footwell
Puddle
Trunk
Console**



Glove Box

Using a trim removal tool, pry down the glove box light assembly. Pry on the side of the light assembly away from the light control switch rod; pivot the light downward.

Insert a new festoon LED in the bulb holder. Test operation and flip end-for-end if the bulb does not work initially.

Reinstall the light assembly.



Footwell


Using a trim removal tool, pry down a footwell light assembly.

Remove the original glass bulb.

Insert a new 5-chip wedge base LED into the bulb holder. Test operation and flip the LED over if the bulb does not work initially.

Reinstall the light assembly.

Repeat the process at the other footwell light.

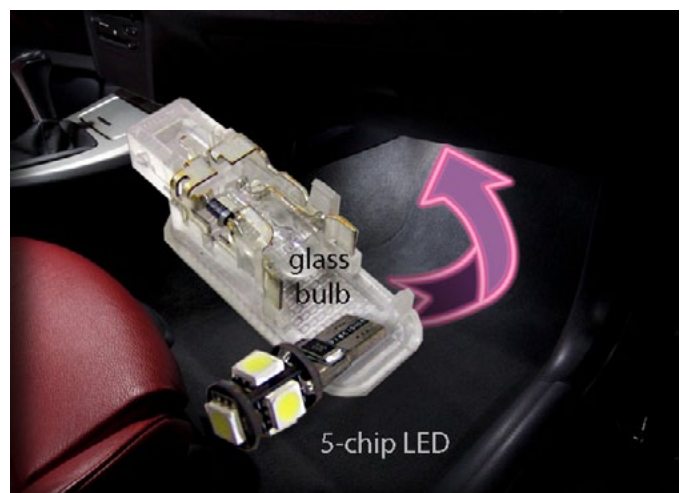

Ziza Interior Lighting Package Installation

ES2215317



Fits BMW E92

Puddle Lamps - Step 1

Pry down on the notched end of the puddle lamp assemblies in the door bottoms.



Puddle Lamps - Step 2

Twist and pull to remove the puddle lamp bulb holder from the light assembly.

Replace the original bulb with a 5-chip wedge style LED. Test the LED and flip it over to reverse the polarity if it does not work initially.

Insert the LED/bulb holder into the light assembly and twist to lock it in place.

Snap the light back into the door bottom. Repeat the process at the opposite door.



Trunk Lamp - Step 1

Pry down on the notched end of the trunk light assembly.

The rear of the assembly is covered by a metal heat shield. Pry off the shield to expose the bulb beneath it.

Remove the original bulb.



Ziza Interior Lighting Package Installation

ES2215317




Fits BMW E92

Trunk Lamp - Step 2

Install a new 42mm festoon in the bulb holder, with the LED chips facing toward the lens.

Test LED operation. Flip the LED end-for-end in the bulb holder if it does not light initially.

Replace the metal shield and snap the light assembly back in place in the trunk.

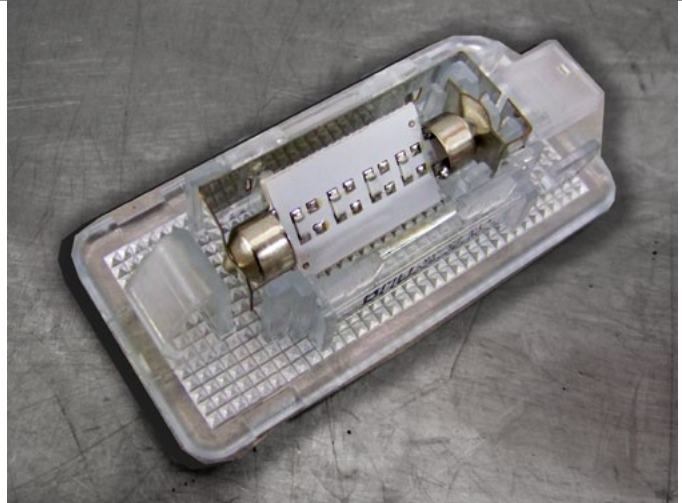

Rear Footwell - Step 1

The E92 has two footwell lights located on the sides of the center console.



Rear Footwell - Step 2

Use a non-marring trim removal tool, pry the light from the side wall of the console.



Ziza Interior Lighting Package Installation


ES2215317



Fits BMW E92

Rear Footwell - Step 3

Press on the two plastic locking tabs (arrows) and raise the light socket assembly from the gray housing.

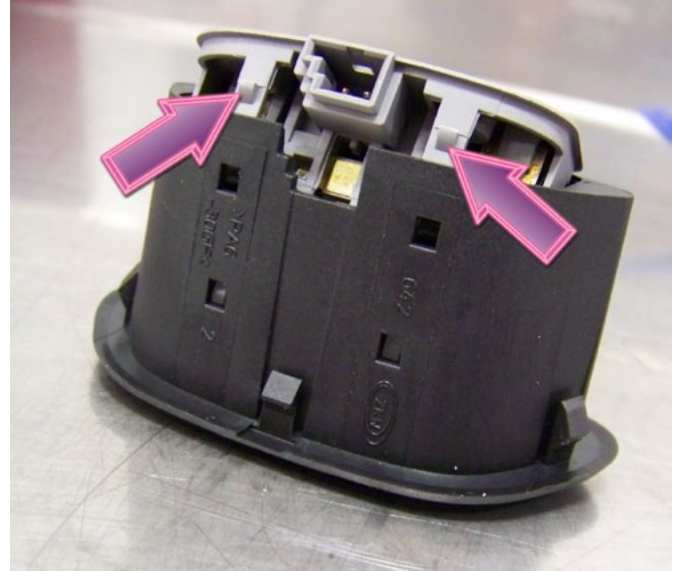

Rear Footwell - Step 4

Flip the housing over and remove the original wedge base bulbs.

Insert two of the micro wedge bulbs, one in each wedge socket.

Test the lights. Reinstall the light socket assembly in the housing and snap it back in place in the console.



Rear Footwell - Step 5

Replace the light assembly in the console.

Repeat the process on the opposite side.



Ziza Interior Lighting Package Installation
ES2215317



Fits BMW E92



ES2500877

ES517779

Prevent damage to interior panels, the headliner, and trim.
Use a plastic, non-marring trim removal tool.
Two complete kits are available.

This concludes the installation of the Ziza Interior Light Kit.