
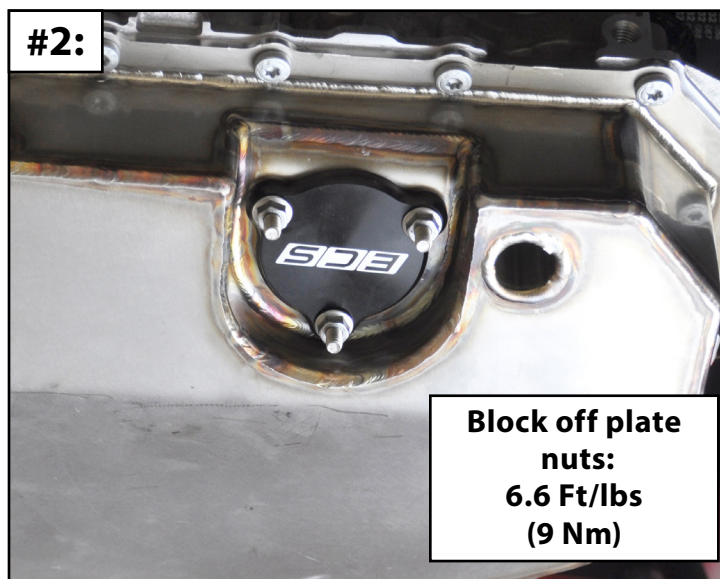


1. Install the oil level sensor (**photo #1**) and torque the nuts to 9 Nm (6.6 ft-lbs).

- OR -

2. Install the ECS block off plate (**photo #2**) and torque the nuts to 9 Nm (6.6 ft-lbs).

 **CAUTION:** *Over-tightening the oil level sensor/block-off plate hardware will cause damage to the oil pan.*

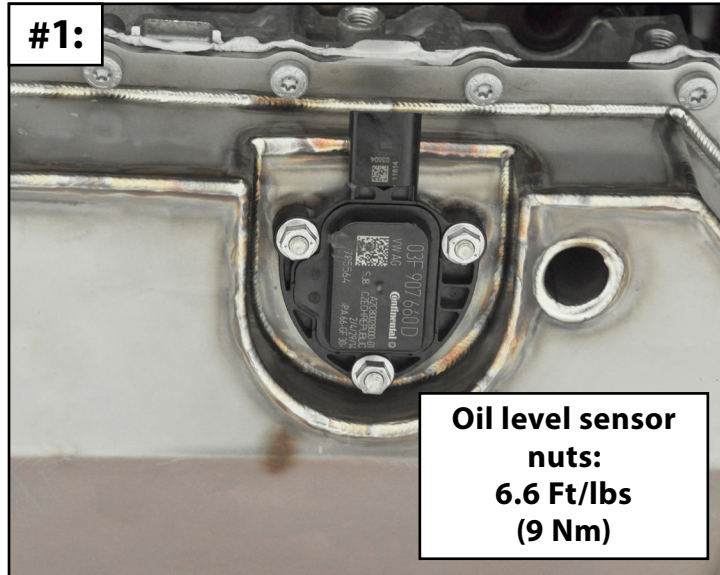

Proper service and repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures and precautions (including use of safety goggles and proper tools and equipment) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety.