

Volkswagen B6 Passat, CC Street Shield Installation

1. Remove the stock plastic belly pan. Remove all of the speed nuts from the side wings on the vehicle (**Photo #1**) and replace them with the **SILVER** ones provided in the hardware kit (quantity varies by model).
2. Install the **BLACK** speed nut onto the frontmost center tab on the new Street Shield skid plate so that the threaded portion will be on top once it is mounted on the vehicle (arrow in **Photo #2**).
3. Lift the Street Shield into position, then loosely install the 3x 5mm Hex (Allen) bolts (highlighted in **BLUE** in **Photo #3**) and the T25 Torx screws (highlighted in **YELLOW** in **Photo #3**, quantity varies by model).
   - Note the assembly order of the bolt, washer and spacer as shown (**BLUE** inset photo in **Photo #3**).


#1:

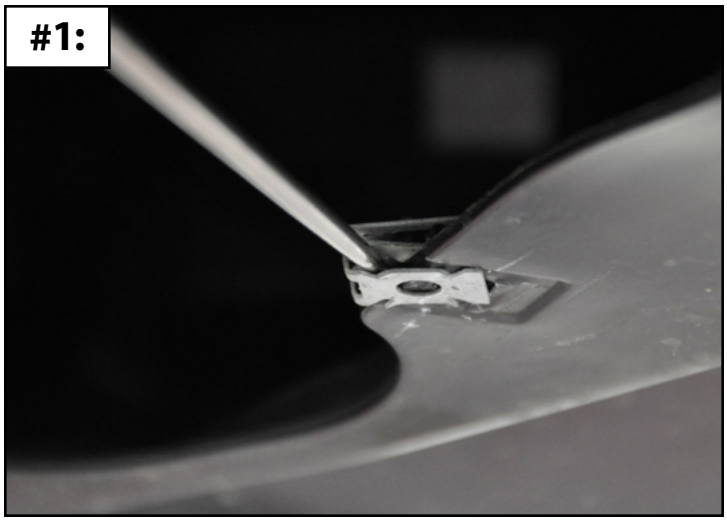

#2:

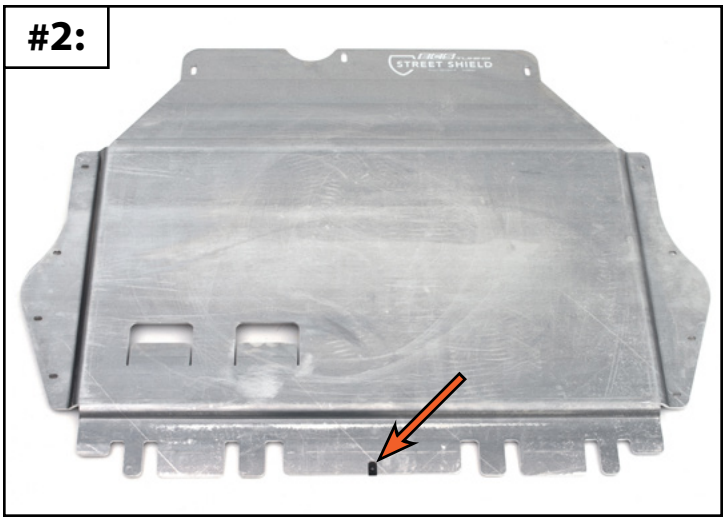

#3:

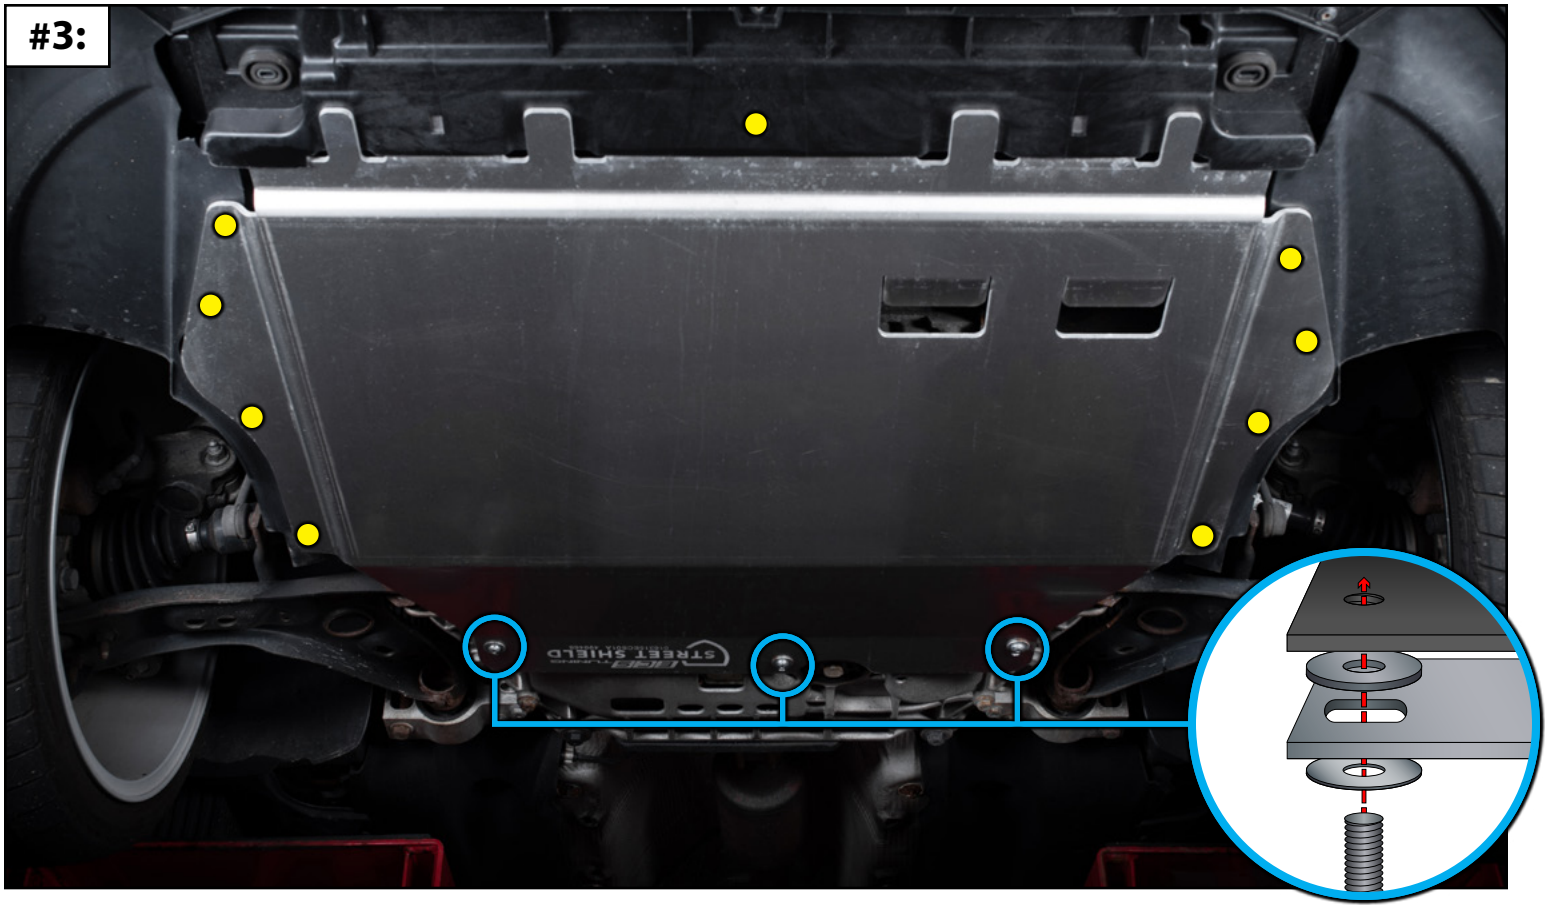

Proper service and repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures and precautions (including use of safety goggles and proper tools and equipment) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety.

Skill Level 1: Easy