

VW MK5/6 2.0T TSI Silicone Intake Hose Installation Overview - ES3493246

Skill Level 1 - Easy

1. Loosen the spring clamps using channel locks or spring clamp pliers (ES2702616) to remove the stock plastic intake pipe.
2. Slide the included hose clamps over either end of the new hose and install the hose in place.
3. Tighten the clamps with a flat head screwdriver to secure the new hose in place.

Congratulations, your installation is complete!

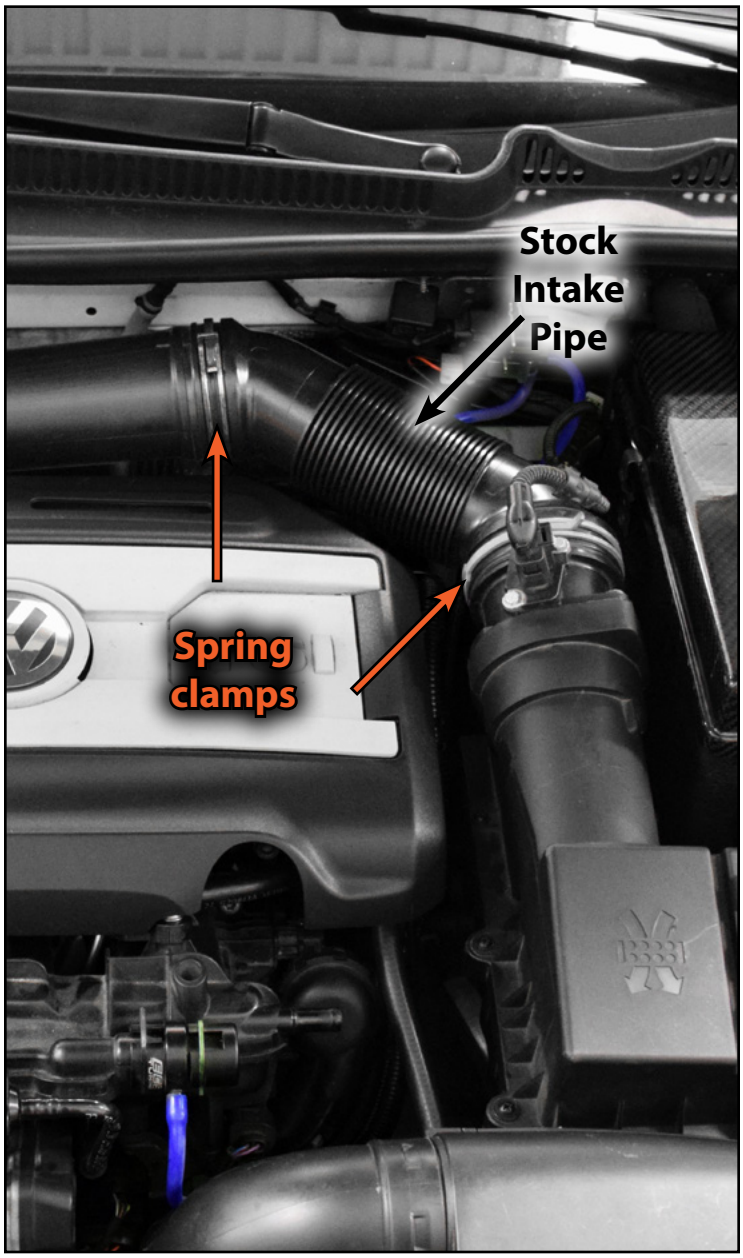

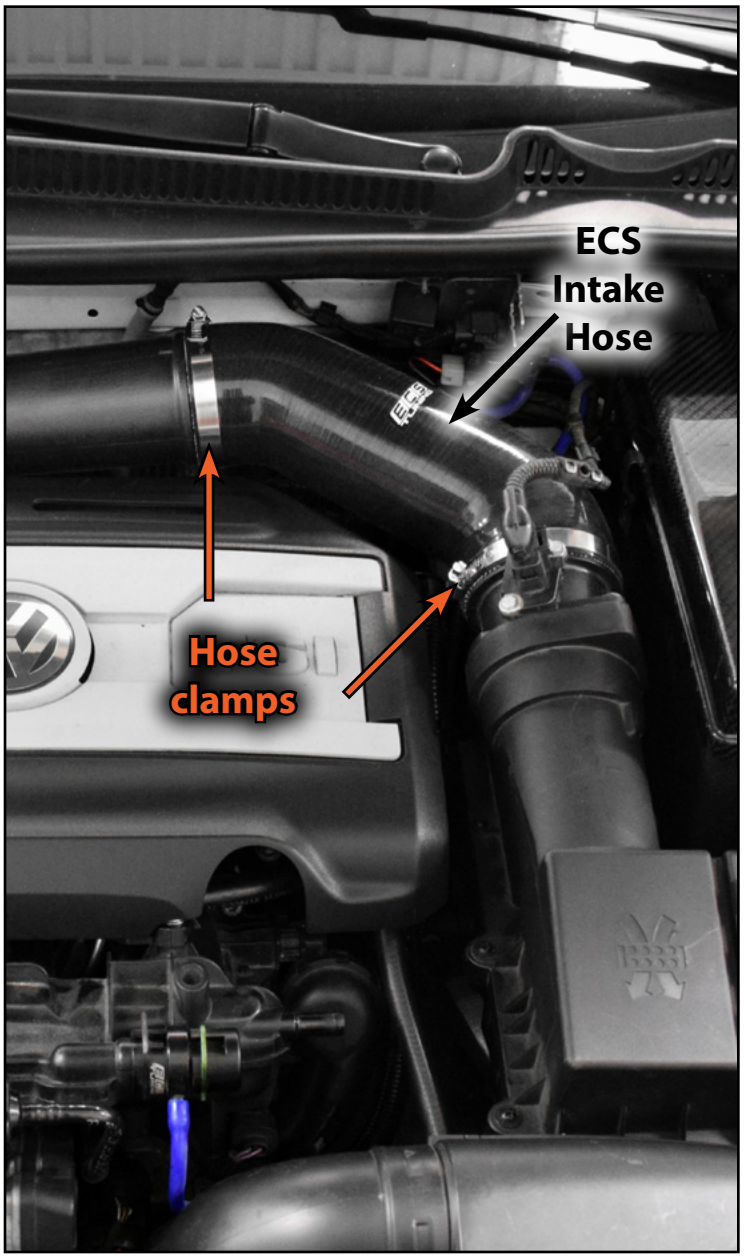

Proper service and repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures and precautions (including use of safety goggles and proper tools and equipment) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety.