



BMW E53 X5 Ditch Light Bracket Set Installation Overview - Click HERE to Shop

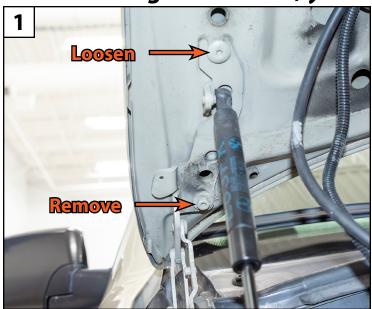


- 1. Have a second set of hands support the hood while you loosen the front hinge screw and remove the rear
- 2. Take a moment to identify the LH and RH brackets, once installed the bracket should come up over the hood and be angled towards the outside of the vehicle.
- 3. Slide the slotted end of the bracket under the front bolt then reinstall the rear bolt. Tighten both bolts until snug.
- 4. Install, wire, and adjust your ditch lights according to the manufacturer's recommendations.

Congratulations, your installation is complete!



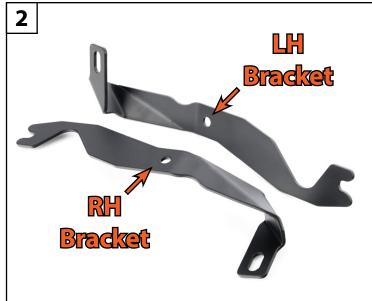

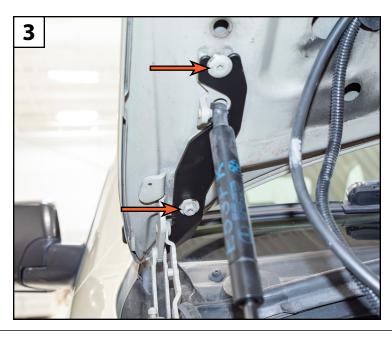



Proper service and repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures and precautions (including use of safety goggles and proper tools and equipment) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety.