Carbon Fiber B Pillars Installation Instructions


Step #1 • Open both doors and pry up on the bottom of the plastic cover for the B pillar (highlighted in **RED**) to pop the clip free, then slide the plastic cover downward to expose the two screws which hold the pillar in place.


Step #2 • Remove the two T25 Torx screws (arrows) and slide the pillar downward to remove it.


Step #3 • Slide the new carbon fiber pillar upward until it engages the plastic upper clip, then re-install the two screws (arrows).

Step #4 • Slide the plastic cover up into the new pillar so that the plastic hooks slide into the slots in the carbon fiber, then firmly push down on the bottom of the plastic cover to pop the lower clip into place.



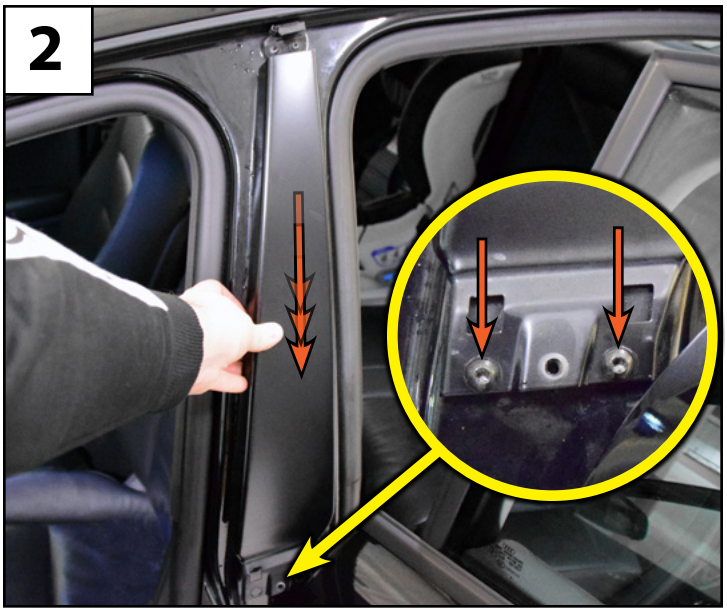

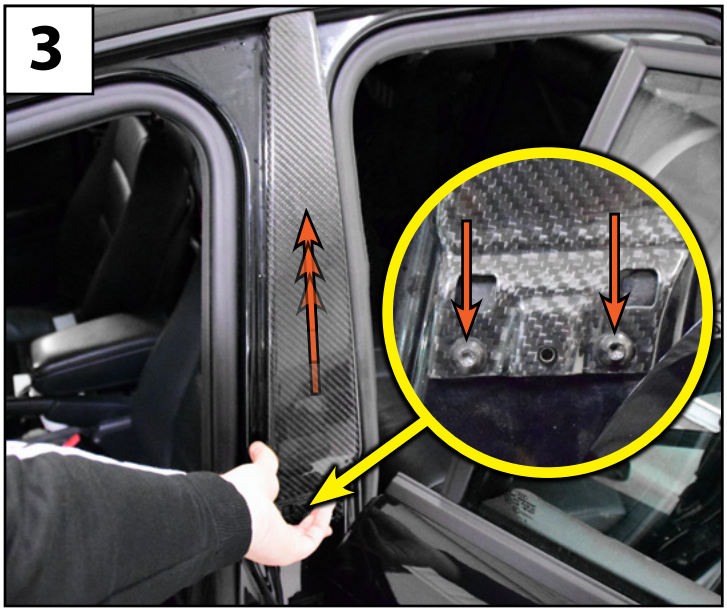

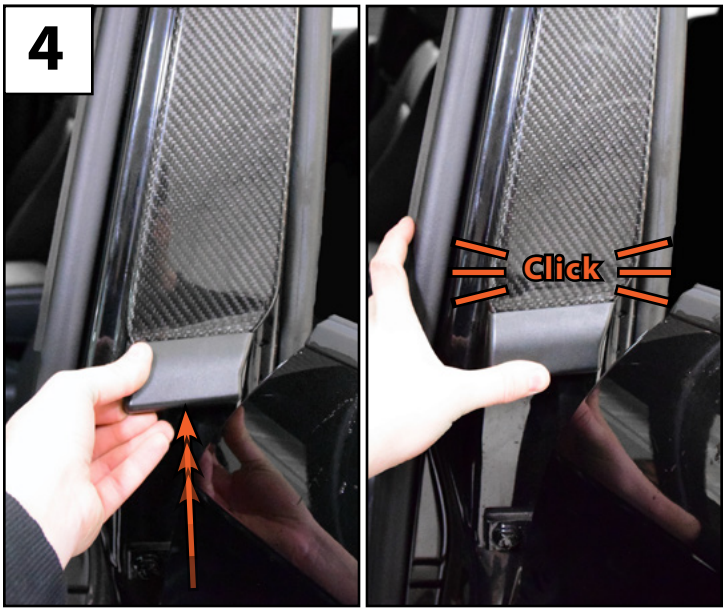

Proper service and repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures and precautions (including use of safety goggles and proper tools and equipment) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety.