



Audi B6 S4 Muffler Delete Kit

Installation Overview - [Click HERE to Shop](#)

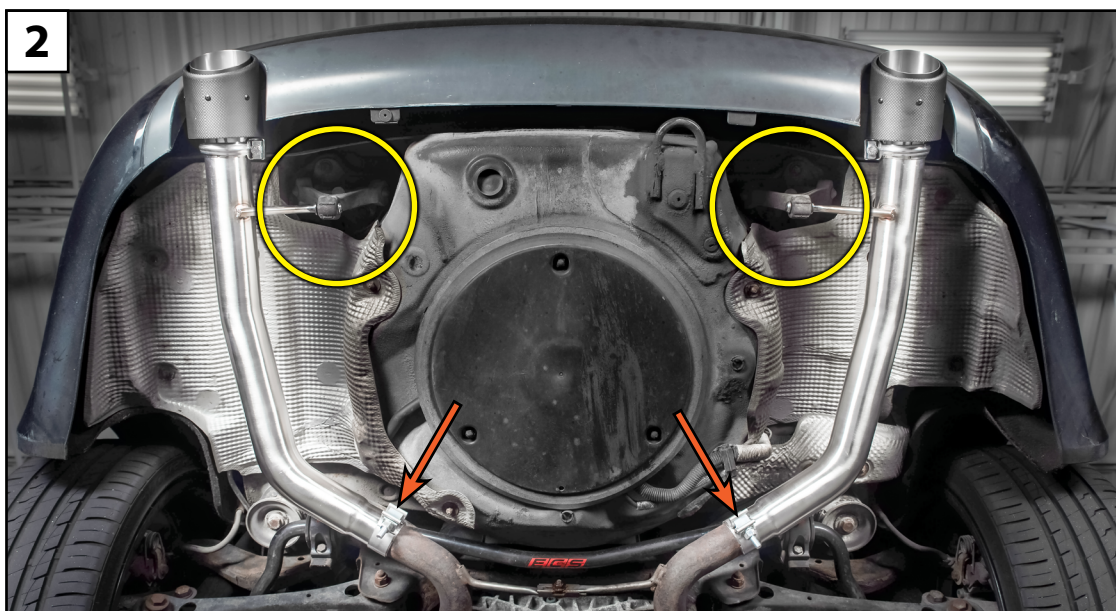

- Step 1**
- Safely lift and support the vehicle, then measure 7.5" downstream from each end of the exhaust brace rod, and using a marker, draw a line around each stock exhaust pipe at this point (**RED** lines) to guide your cut.
 - Cut along the line you made in the previous step, being sure to cut as straight as possible until you cut through the pipe, then remove the mufflers from the exhaust hangers.
- Step 2**
- Slide the muffler delete pipes onto the cut ends of the exhaust, slide the rods into the exhaust hangers (circled in **YELLOW**) and adjust the pipes until you are satisfied with their fitment, then tighten the clamps (arrows).
 - Slide the exhaust tips onto the ends of the pipes and center them inside the bumper cutouts, then tighten the clamps to 19 Nm (14 Ft-lbs).

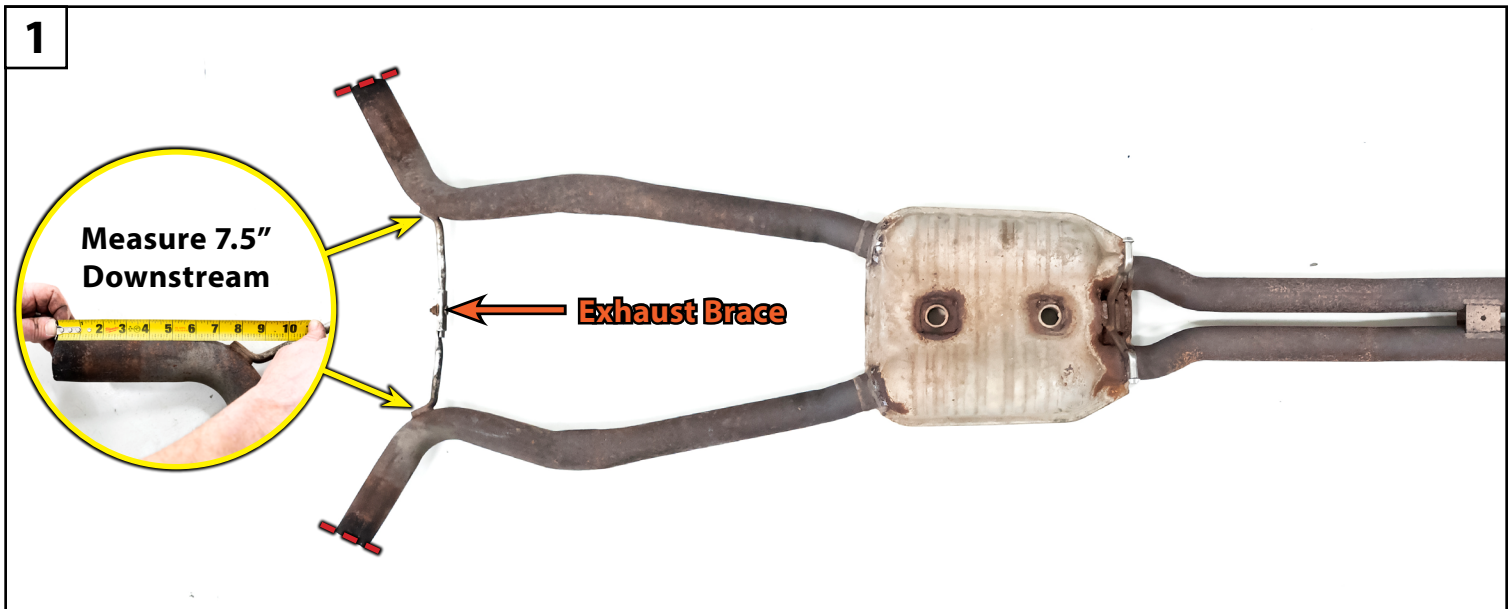

Proper service and repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures and precautions (including use of safety goggles and proper tools and equipment) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety.