


Audi C7 RS7 Carbon Fiber Front Lip Spoiler Installation Overview - [Click HERE to Shop](#)

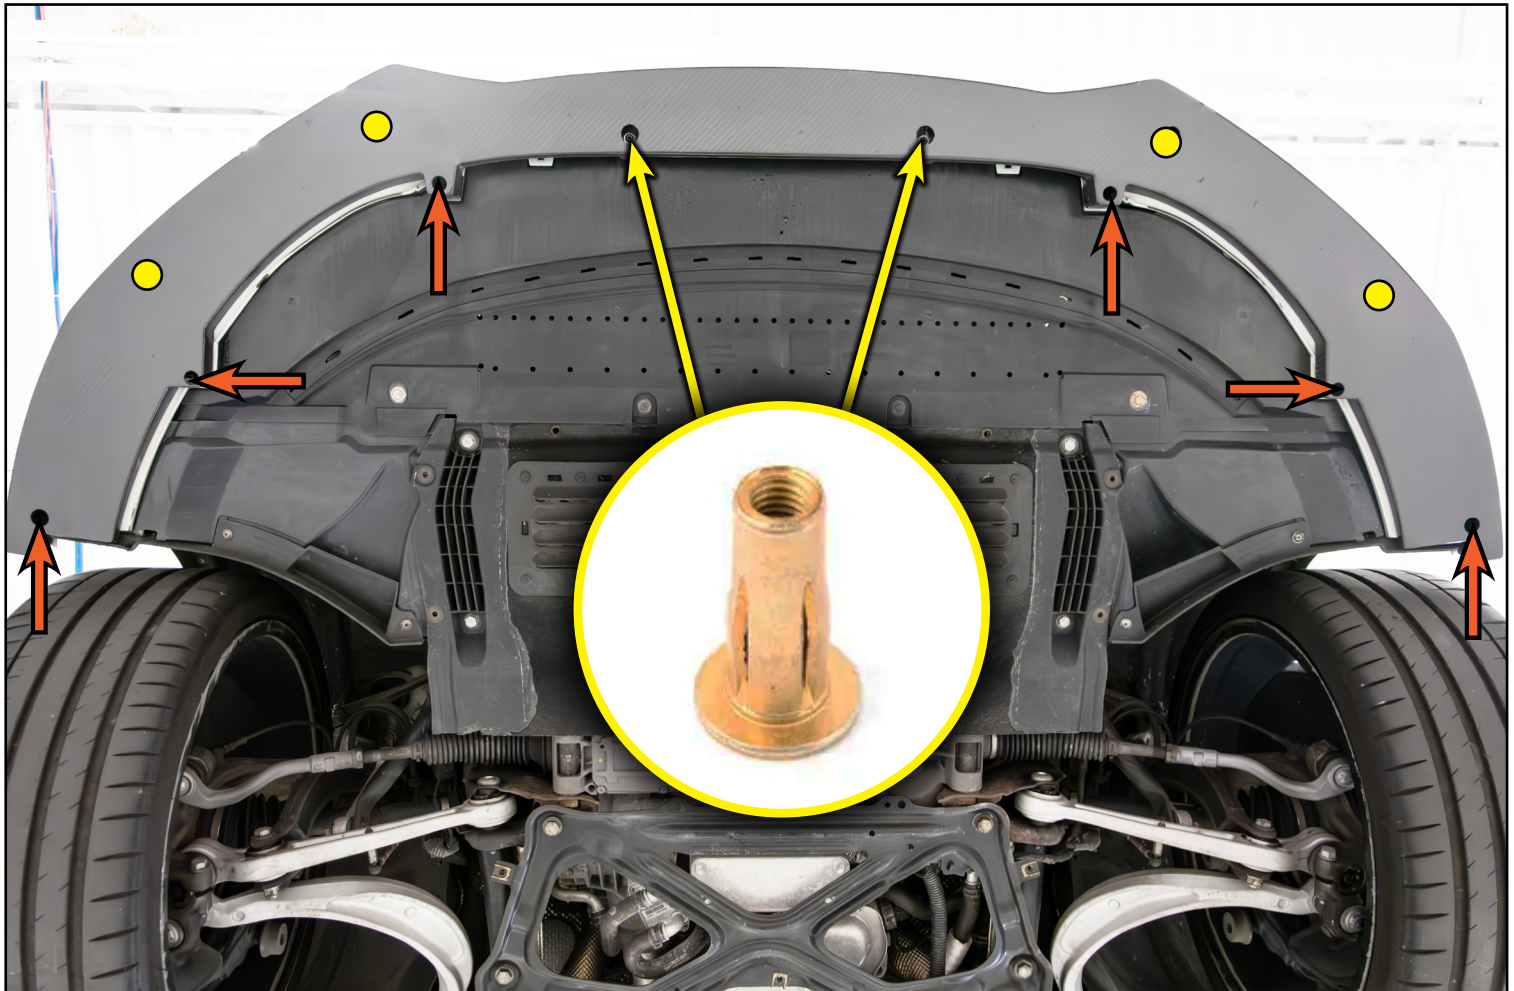

1. Safely lift and support the vehicle from below.
2. Remove the four screws (circled in **YELLOW**) and set them aside.
3. Hold the spoiler up into place, adjust until centered, and mark the two center holes.
4. Drill 10mm holes at both marks, then install and crimp the rivet nuts (inset photo) into the bumper.
-Proceed to the next page for detailed instructions on installing the rivet nuts.
5. Thoroughly clean the surface of the bumper and prep with rubbing alcohol.
6. Dog-ear the backing on each strip of double-sided tape, lift the spoiler up into place, and loosely install the two center M6 x 20mm bolts.
7. Adjust the spoiler until you are satisfied with the fitment, then remove the backing from the tape and push up along the spoiler to adhere it to the surface of the bumper.
8. Re-install the four screws (circled in **YELLOW**), then install the six self-tapping screws (arrows) before fully tightening the two center screws.

Congratulations, your installation is complete!



Proper service and repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures and precautions (including use of safety goggles and proper tools and equipment) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety.

1. Prepare the mounting holes in the bumper by drilling them out using a 10mm drill bit.
2. Align the riv-nut tool body with the flanged side of the riv-nut, then thread the screw through the tool body and into the riv-nut by hand until it is fully seated
3. Slide the riv-nut up into the drilled hole in the bumper until it is fully seated.
4. Ensure the flange on the riv-nut stays completely flush with the surface of the bumper during crimping as shown.
5. While holding the tool body stationary with a wrench, rotate the tool pressing bolt clockwise to expand the riv-nut.
6. Tighten the bolt till snug, then unthread the screw and remove the tool.

