

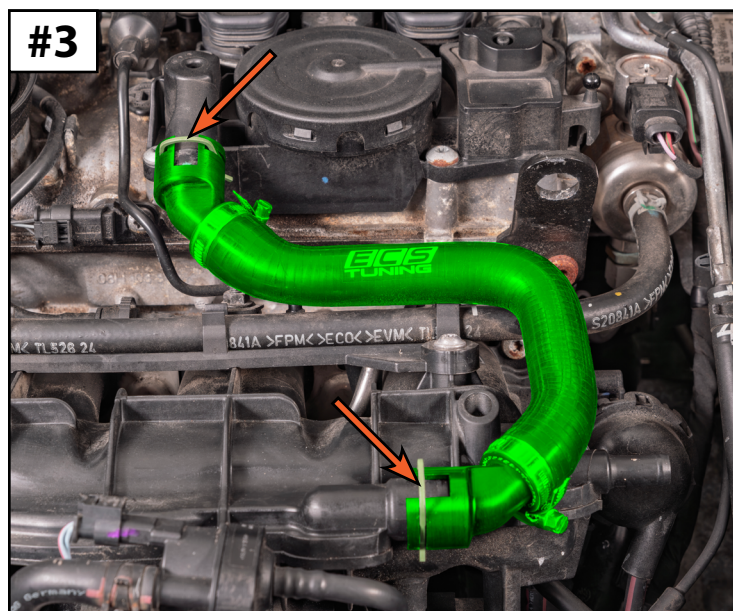


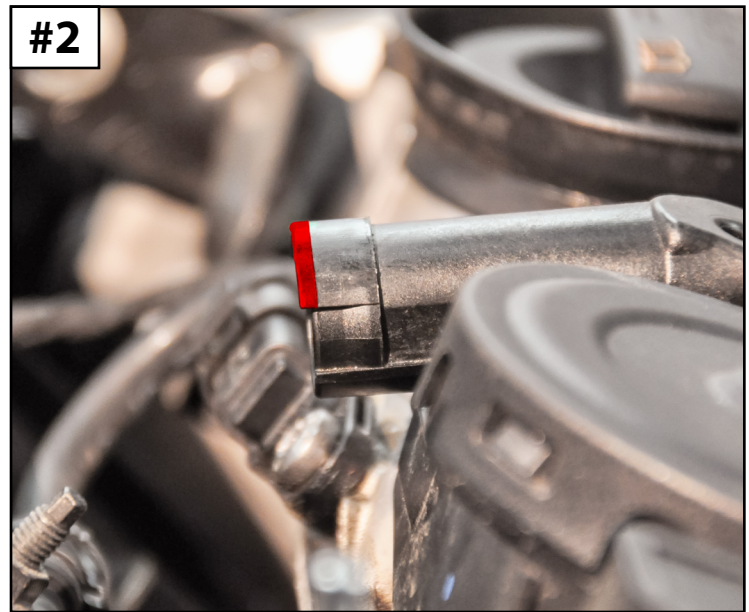

## VW/Audi TSI Upgraded Silicone PCV Breather Hose Installation Overview - [Click HERE to Shop](#)

1. Depress the retaining tabs (arrows in inset photo) and pull the OE vent hose (highlighted in **RED** in **Photo #1**) free from the PCV assembly and the intake manifold.
2. File down the lip (highlighted in **RED** in **Photo #2**) on the PCV assembly flange down until it is flush with the face of the flange.
3. Install the new PCV breather hose (highlighted in **GREEN** in **Photo #3**) between the PCV assembly and the intake manifold and install the provided clips (arrows) to retain it in place.

***Congratulations, your installation is complete!***

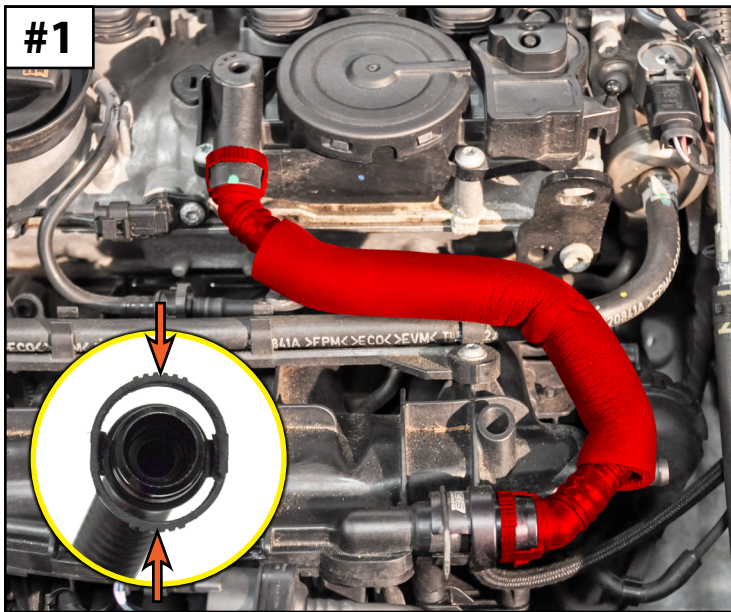

Proper service and repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures and precautions (including use of safety goggles and proper tools and equipment) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety.