




1. Remove the trunk floor cover, tool kit cover, tool kit, and spare tire from the vehicle.
2. Thoroughly clean the trunk floor and spare tire well to remove any dust, debris, or residue that may prevent the sound deadening panels from fully adhering to the surface.
3. Arrange the sound deadening panels (referencing the diagram on [Page 2](#)) on the trunk floor and spare tire well, ensuring the panels are oriented correctly.
4. Peel the protective backing from each sound deadening panel and install them onto the trunk floor, pressing downward along the entire surface of each panel to ensure proper adhesion.
5. Reinstall the spare tire, tool kit, tool kit cover and trunk floor covering.

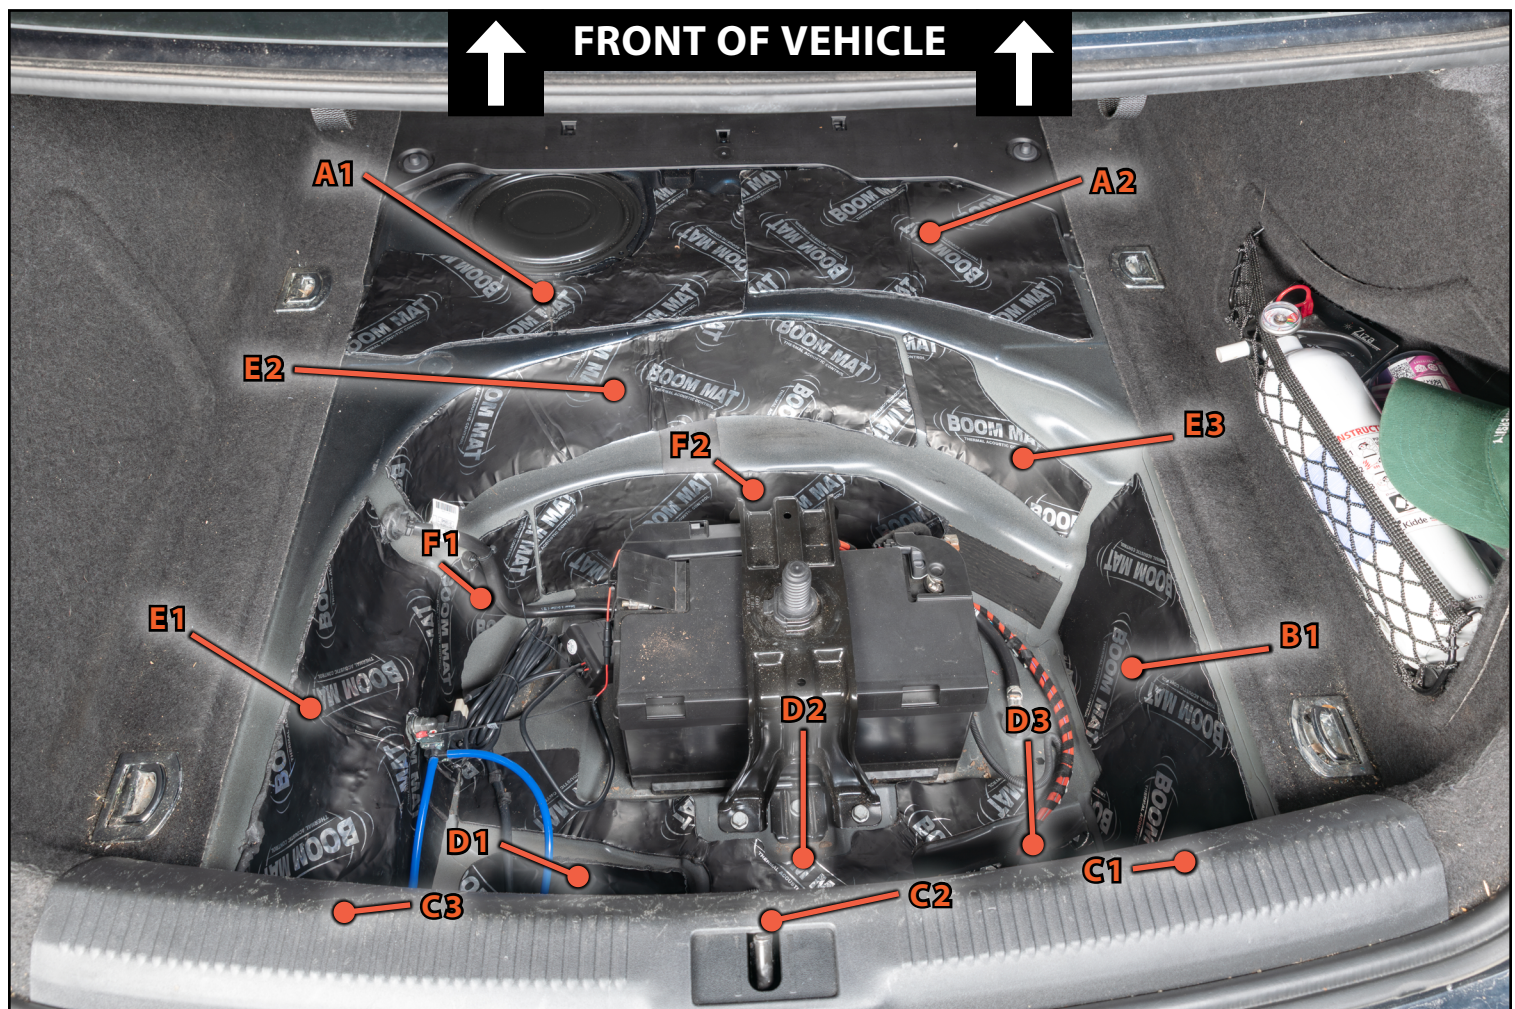

Congratulations, your installation is complete!

Proper service and repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures and precautions (including use of safety goggles and proper tools and equipment) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety.

Description	Item No.
Trunk floor left	A1
Trunk floor right	A2
Well right	B1
Well rear right	C1
Well rear center	C2
Well rear left	C3
Well bottom left	D1
Well bottom center	D2
Well bottom right	D3
Well left	E1
Well front center (upper)	E2
Well front right (upper)	E3
Well front left (lower)	F1
Well front center (lower)	F2

