

BMW Clutch Slave Cylinder Bleeder Tool User Manual

- Unbolt the clutch slave cylinder and pull it free from the transmission, leaving the clutch line connected (**Fig: 1.1**).
- Slide the slave cylinder into the tool as shown (**Fig: 1.2**), then rotate the knob to compress the slave cylinder until it stops (**Fig: 1.3**).
- Remove the rubber bleeder screw cap and bleed the slave cylinder using a pressure bleeder or the two-man method (**Fig: 1.4**) until the fluid runs clear and free from any bubbles, then close the bleed screw and reinstall the rubber cap.
- Release the tool, and reinstall the slave cylinder into the transmission (**Fig: 1.5**).

Fig: 1.1

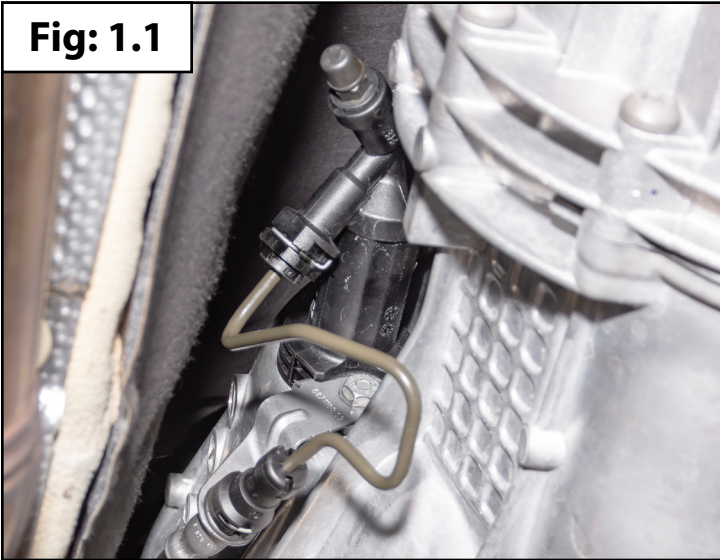


Fig: 1.2



Fig: 1.3

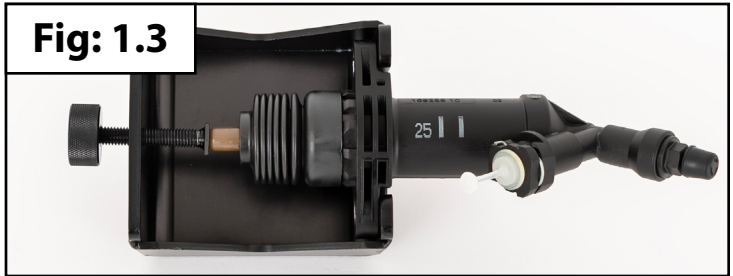


Fig: 1.4



Fig: 1.5

