

INSTALLING THE SECONDARY AIR FILTER ADAPTER KIT

*The mounting grommet which is included in this kit will not be used, only the spacer is required for this application.

This kit must be used if your vehicle is equipped with Secondary Air Injection (SAI). It can be found on our website by clicking [HERE](#), or you can enter your vehicle information into the drop-down menu on [ecstuning.com](#), then select:

- **Engine > Intake > Performance > ECS > Accessories**



SAI Air Filter w/Clamp



SAI Air Filter Adapter



SAI Air Filter Bracket



Rubber Spacer & Mounting Grommet*

Step 1: Flat Blade Screwdriver - or - 7mm Socket, 1/4" Ratchet


Remove from the secondary air injection kit from its packaging, and tighten the hose clamp which secures the filter until it is snug.



INSTALLING THE SECONDARY AIR FILTER ADAPTER KIT

Step 2:


Place the secondary air intake assembly onto the outermost air box mounting stud (the stud which is nearest to the fender) so the filter and adapter hang down below the mounting stud.

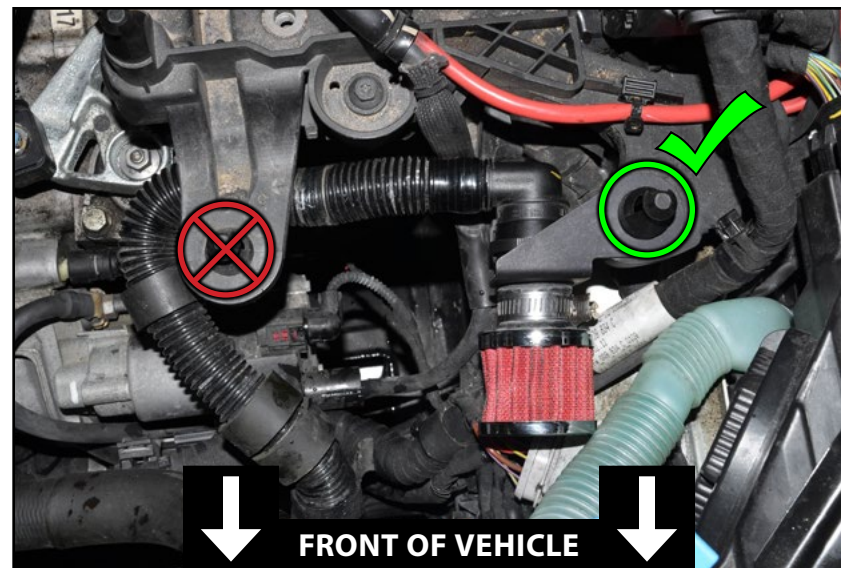

Step 3:

Route the original secondary air intake tube over to the adapter and connect the two together. Rotate the filter assembly as necessary so the secondary air intake tube does not kink or bind.

Allow the assembly to hang in place for now, when you install the carbon fiber air box the innermost air box mounting grommet will hold the secondary air intake securely in place. As you can see in the photo, the secondary air intake is almost completely hidden underneath the heat shield.

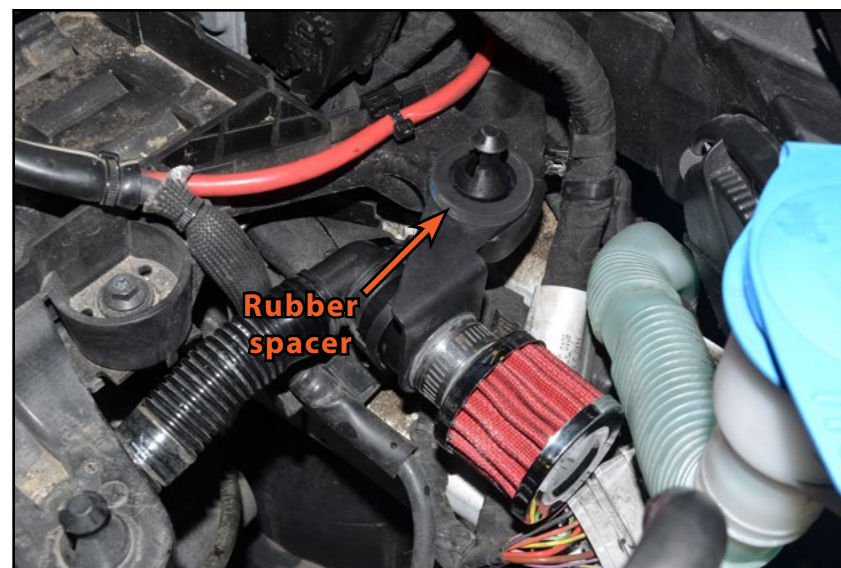

Your SAI Adapter Kit installation is complete!