



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE: PRO-YD-VJ11-LTDRL-(ALL COLORS)

Tools Required

T-15 & T-30 Torx Drivers



Please Note

If you are unfamiliar with the installation processes,
professional installation is highly recommended.



1) Open the hood.



2) Remove [4x] T-15 torx screws.



3) Unseat the grille.



4) Remove [3x] T-30 torx screws securing the fascia behind the grille.



5) Remove [5x] T-15 torx screws securing the fender liner.




6) Remove [6x] T-15 torx screws securing the fascia to the undertray.



7) Remove [1x] T-15 torx screw securing the bottom corner of the fascia on each side.




8) Unseat the front bumper fascia by pulling it up to unseat the fascia retainer hooks, then pull the edges out and ease the fascia back.

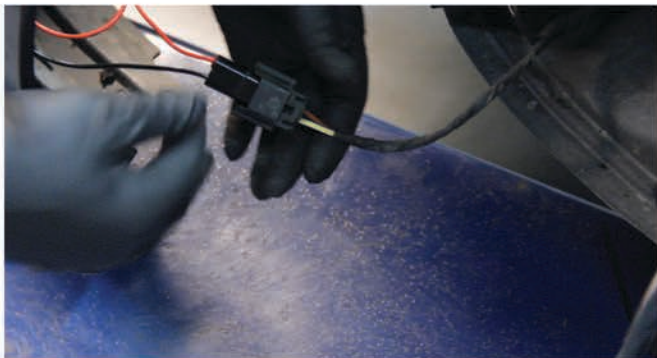

9) Disconnect the fog light harness, if equipped.



10) Remove [3x] T-30 torx screws securing the headlight.

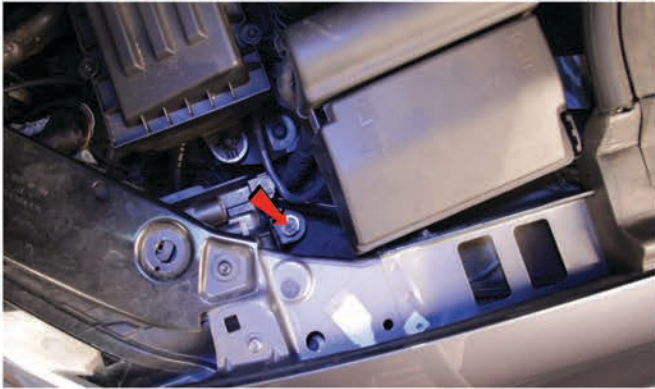

11) Remove [1x] T-30 torx screw securing the headlight hidden behind the core support.



12) Unseat the headlight.



13) Disconnect the headlight wiring harness.



14) Your beam adjusters are shown here and are 8mm. This model headlight is plug and play, no wiring is necessary for the Light Tube or LED DRLs.



15) Connect the Spyder headlight to the headlight wiring harness.



16) Seat the Spyder headlight.



17) Reinstall [3x] T-30 Torx screws to secure the headlight.



18) Reinstall [1x] T-30 Torx screw hidden behind the core support to secure the headlight.



19) Reconnect the fog light harnesses [if equipped], then seat the front bumper fascia into its retaining hooks, then be sure the fascia edges clip properly into place.



20) Reinstall [3x] T-30 torx screws hidden behind the grille to secure the fascia.



21) Seat the grille.



22) Reinstall [4x] T-15 torx screws to secure the grille.



23) Reinstall [6x] T-15 torx screws to secure the fascia to the undertray.



24) Reinstall [1x] T-15 torx screw securing the bottom corner of the fascia on each side.



25) Reinstall [5x] T-15 torx screws to secure the fascia to the fender liner in the wheel well.



26) Close the hood and enjoy your new Spyder Light Tube projector headlights.



For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.
<http://www.youtube.com/watch?v=90mzdt3nQY>

Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is a guide only, designed to save you time during the installation process. We take no responsibility and cannot be held liable for improper installation. If you do not know how to install your product or are not comfortable doing it yourself, please seek professional installation.