


Installation instruction for Leyo Motorsport VW Golf MK6 GTI Intake System



Removing factory airbox

Step 1: Unplug MAF sensor

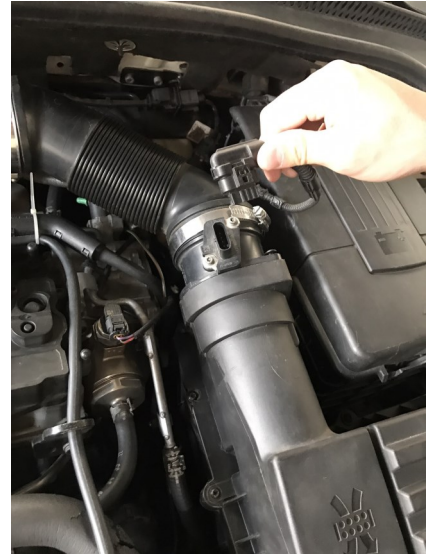

Step 2: Unclip front plastic cover over air inlet




Step 3: Remove ribbed intake tube by unclamping both sides



Step 4: Remove the factory airbox by pulling upwards



Step 5: Remove air inlet by unscrewing two screws that is holding it onto the radiator support

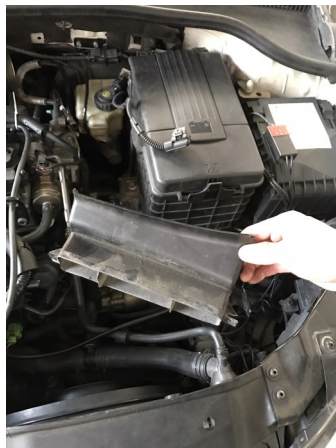

Step 6: Remove mass air flow housing from factory airbox



Installing Leyo MK6 GTI Intake

Step 1: Secure the filter to the heat shield by tightening the clamp provided




Step 2: Using the screw provided, mount and secure the airbox into the engine bay (next to battery rack)



Step 3: Tighten front end of the heat shield to the radiator support using one of the two screws used on the removed factory air inlet




Step 4: Secure the Leyo silicone elbow as pictured onto the heatshield

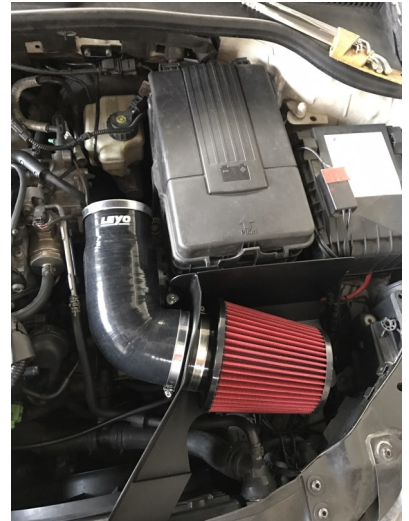

Step 5: Attach the mass air flow housing to the silicon elbow but do not tighten the clamp just yet



Step 6: Install the upper Leyo silicone hose, adjust all piping so that it sits nicely in place, then tighten all the clamps

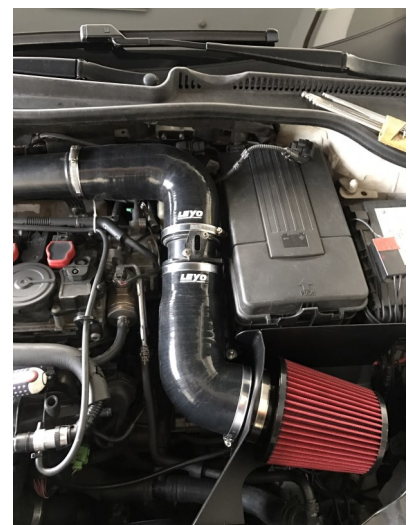

Step 7: Re-connect the mass air flow sensor



Installation complete! Thank you for choosing Leyo Motorsport!

LEYO
MOTORSPORT

